

PRODUCT DESCRIPTION

Programmable regulators with RS232 or RS485 serial interface are designed to measure temperature and relative humidity of air, to measure concentration of CO₂ in air, to signal alarms and control of external devices. Regulators can be used in a chemical non-aggressive environment.

The CO₂ concentration is measured using the maintenance free sensor. The unique patented auto-calibration procedure compensates aging of the sensing element and guarantees outstanding high reliability and long-term stability.

Two output relays functions can be set from regulator keyboard or from computer. You can assign one of measured or computed value (dew point temperature, absolute humidity, specific humidity mixing ratio and specific enthalpy) to each relay. Setting of delay, hysteresis, audible alarm is enabled for each relay too. Devices are equipped with four button keyboard and two-line LCD display. The visual indication of the CO₂ concentration is provided by three LEDs to the left side of the display.

Regulators support Modbus RTU protocol and protocol compatible with standard Advantech-ADAM. For setting of all parameters you can use *TSensor* software (see www.cometsystem.cz/software.htm).

type *	serial interface	measured values	version	mounting	galvanic isolated output
H5321	RS232	CO ₂	probe on cable	wall	no
H5324	RS232	CO ₂	ambient air	wall	no
H5421	RS485	CO ₂	probe on cable	wall	yes
H5424	RS485	CO ₂	ambient air	wall	yes
H6320	RS232	T + RH + CO ₂ + CV	ambient air	wall	no
H6321	RS232	T + RH + CO ₂ + CV	probes on cable	wall	no
H6420	RS485	T + RH + CO ₂ + CV	ambient air	wall	yes
H6421	RS485	T + RH + CO ₂ + CV	probes on cable	wall	yes

* models marked HxxxxZ are custom - specified devices

T...temperature, RH...relative humidity, CO₂...concentration CO₂ in air, CV...computed values

INSTALLATION AND OPERATION

The mounting holes and connection terminals are accessible after unscrewing the four screws in the corners of regulator and removing the lid. Devices have to be mounted on a flat surface to prevent deformation. Pass cables (external diameter 3 to 6.5 mm) through released glands and connect wires. Wire cross-section choose from 0,14 to 1.5mm². The communication cables should be shielded. Do not forget to insert attached plugs into unused cable glands. The cables should be located as far as possible from potential interference sources. Unpack the external CO₂ probe and connect it to the device. Pay attention to mounting the device and probes, because incorrect choice of working position or place of measuring could adversely affect accuracy and long-term stability of measured values.

Actual parameters settings of each relay can be displayed by pressing of „▲“ key. To change any parameter, press the „Set“ key, enter password (default 0000) and set required value. Then click on „Set“ and pressing „Esc“ key exit setup mode. To change the password and to set all other parameters (acoustic alarm, limits of CO₂ indication, response to the error status, choice of communication protocol, select the computed value etc.) is used **Extended setting mode** (see manual for devices at www.cometsystem.cz/manuals.htm).

After switching the device starts internal test. During this time (about 20 s) LCD display shows **----** instead of CO₂ concentration value.

Devices don't require special maintenance. We recommend you periodical calibration for validation of measurement accuracy.

COMMUNICATION PROTOCOLS AND ERROR STATES

Description of communication protocols you can download from www.cometsystem.cz/manuals.htm. Device setting from the manufacturer is **ModBus RTU**, address **1**, communication speed **9600 Bd** (no parity, 2 stop bits).

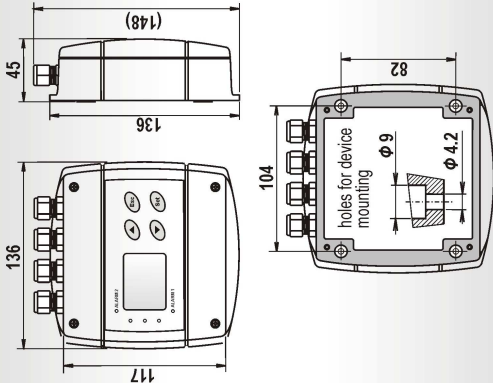
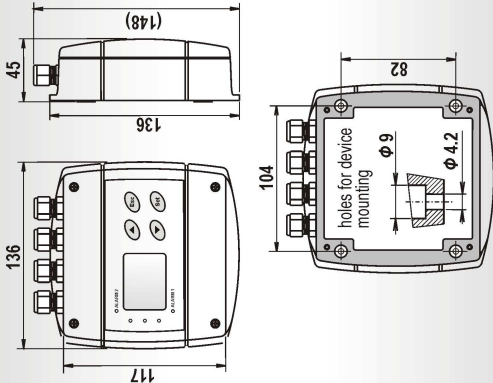
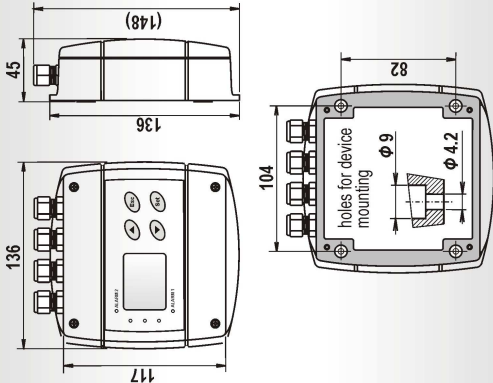
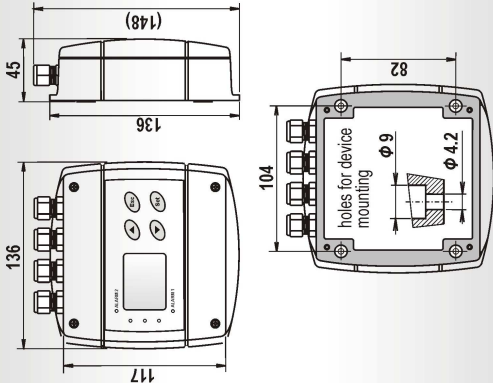
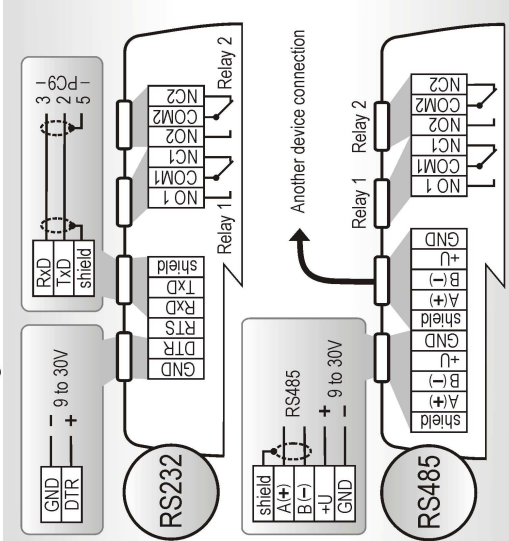
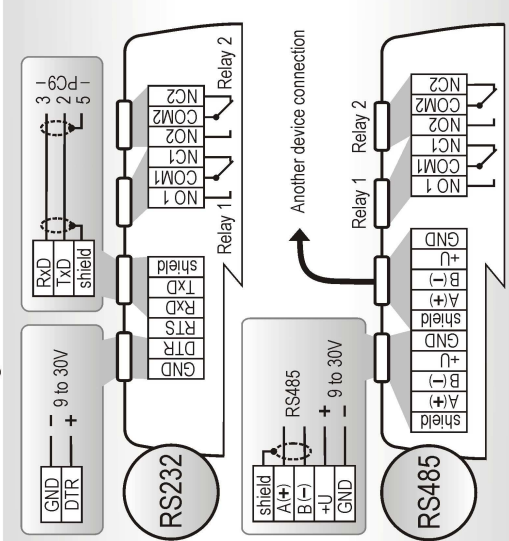
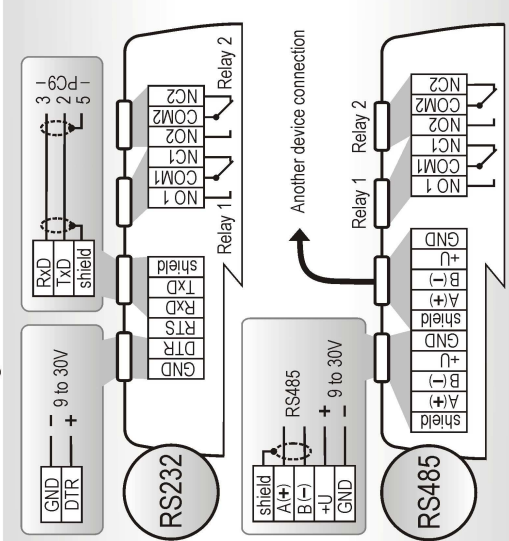
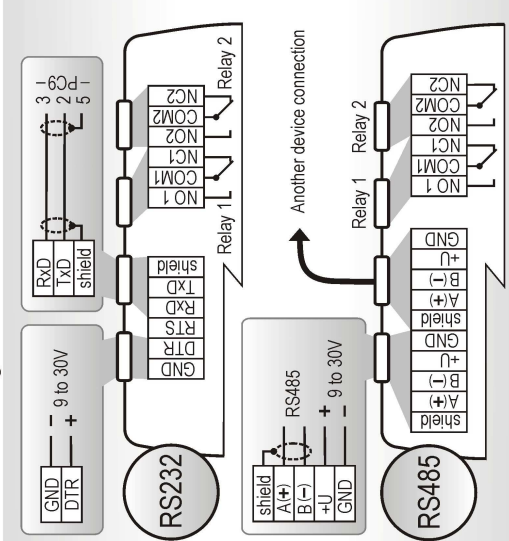
Device continuously checks its state during operation and if an error appears, it is displayed relevant code: **Err 1** – measured or calculated value (except the concentration of CO₂) is over the upper limit, **Err 2** – measured or calculated value is below the lower limit or CO₂ concentration measurement error occurred, **Err 0, Err 3 a Err 4** – it is a serious error, please contact distributor of the device, **Err 5, Err 6** - there is problem with assigned value to output relay, **Err 9** – inserted password is not valid.

SAFETY INSTRUCTIONS



- Humidity and temperature sensors of the regulator can not be operate and store without a filter cap.
- Temperature and humidity sensors have not to be exposed to direct contact with water and other liquids.
- It is not recommended to use the humidity regulators for long time under condensation conditions.
- Take care when unscrewing the filter cap as the sensor element could be damaged.
- The regulator must be turned on for at least 24 hours in order to start the automatic calibration of the CO₂ sensor.
- Don't connect or disconnect devices while power supply voltage is on.
- Installation, electrical connection and commissioning should be performed by qualified personnel only.
- Devices contain electronic components, it needs to liquidate them according to currently valid conditions.
- For more information, please use detailed manuals and other documentation which are available at www.cometsystem.cz/manuals.htm or www.cometsystem.cz/software.htm.

Technical specifications

	H5321 / H5421	H5324 / H5424	H6320 / H6420	H6321 / H6421
Device types with RS232 / RS485 serial interface	9 - 30Vdc / 1W / 4W 50V / 2A / 60VA	9 - 30Vdc / 1W / 4W 50V / 2A / 60VA	9 to 30Vdc / 1W / 4W 50V / 2A / 60VA	9 to 30Vdc / 1W / 4W 50V / 2A / 60VA
Supply voltage / power consumption during normal operation / max. power consumption (for 50 ms with 15 s period)	—	—	—	—
Relay outputs - max. switching voltage / max. switching current / max switching power	—	—	—	—
Temperature measuring range	—	—	—	—
Accuracy of temperature measurement	—	—	—	—
Relative humidity (RH) measuring range *	0 to 10 000 ppm ± (100ppm-5% of measured value)	0 to 2000 ppm ± (50ppm+2% of measuring value)	0 to 2000 ppm ± (50ppm+2% of measuring value)	0 to 10 000 ppm ± (100ppm+5% of measured value)
Accuracy of humidity measurement from 5 to 95 %RH at 23°C	—	—	—	—
CO ₂ concentration measuring range **	— / — / 5 years IP65 / — / IP65 / —	— / — / 5 years IP30 / — / — / —	1 year / 2 years / 5 years IP30 / IP40 / — / —	1 year / 2 years / 5 years IP65 / — / IP65 / IP40
Accuracy of CO ₂ concentration measurement at 25°C and 1013 hPa	—	—	—	—
Other calculated humidity variables - dew point temperature, absolute humidity, specific humidity,	—	—	—	—
Recommended calibration interval - relative humidity / temperature / CO ₂	—	—	—	—
Protection class - case with electronics / measuring end of stem / CO ₂ probe / RH+T probe	—	—	—	—
Temperature operating range of the case with electronics ***	—	—	—	—
Temperature operating range of the measuring end of stem	—	—	—	—
Temperature operating range of the CO ₂ external probe	—	—	—	—
Temperature operating range of the RH+T external probe	—	—	—	—
Humidity operating range (no condensation)	—	—	—	—
Atmospheric pressure operating range	—	—	—	—
Mounting position	—	—	—	—
Storage temperature range (5 to 95%RH, no condensation, atmospheric pressure 700 to 1100 hPa)	—	—	—	—
Electromagnetic compatibility according to	—	—	—	—
Weight of the device without RS232 communication cable (weight of the cable is 70g)	440 (470, 530) g	340 g	360 g	520 (590, 730) g
Dimensions [mm]				
Electrical wiring				

* The relative humidity measuring range is limited at temperatures above 85°C, see manuals for devices.
 ** LED indication (preset by manufacturer): **green** (0 to 1000 ppm), **yellow** (1000 to 1200 ppm), **red** (1200 to 2000/10000 ppm).

*** It is recommended to switch off the LCD display at ambient temperature above 70°C.